



XFINITY Digital Transport Adapter Universal Remote



FEATURES AND FUNCTIONS

Use the remote control's keys to perform actions described below (see the following key chart).



When a valid TV code is programmed the **POWER** key will turn on and off the TV.



Use **SET** for all programming sequences



Use **INFO** to display current channel information.



Use the keypad (0 ~ 9) to directly select the channels (e.g., 09 or 031).



Use **ENTER** to directly tune to a channel (e.g. 1-0-9 Enter).



Use **LAST** to recall the last channel.



Use **LANG** to switch between different languages and audio options, when available on the Digital Adapter.



Use **CH+** (or **CH-**) to select the next higher (or lower) channel.



Use **VOL+** (or **VOL-**) to raise (or lower) the sound volume on the Digital Adapter. When a valid TV code is programmed these keys will operate the TV's volume control.



Press **MUTE** once to turn on or off the sound

PROGRAMMING TV CONTROL

The XFINITY Digital Adapter remote control is preprogrammed at the factory to operate the Digital Adapter. The XFINITY Digital Adapter remote also contains a universal TV library to allow you to control the Power and Volume of your TV.

1. Turn on the TV

NOTE: Please read steps 2 to 4 completely before proceeding. Highlight or write down the codes and device you wish to program before moving on to step 2.

2. Press and hold **SET** until the **Red Light** blinks twice, then release **SET**.

3. To view the code for the first digit, press **1** once. Wait 3 seconds and count the number of times the **Red Light** blinks (e.g., 3 blinks = 3) and write down the number in the left most TV Code box (at end of this section).

CHECKING THE CODES

If you have set up the remote control using the Searching For Your Code procedure, you may need to find out which five-digit code is operating your TV. Perform the following steps after setting up your TV to find out which five-digit code operates your TV.

1. Press and hold **SET** until the **Red Light** blinks twice, then release **SET**.

2. Enter in **9 - 9 - 0**. The **Red Light** will blink twice.

3. To view the code for the first digit, press **1** once. Wait 3 seconds and count the number of times the **Red Light** blinks (e.g., 3 blinks = 3) and write down the number in the left most TV Code box (at end of this section).

NOTE: If a code digit is "0", the red light will not blink.

4. Repeat step 3 four more times for the remaining digits. Use **2** for the second digit, **3** for the third digit, **4** for the fourth digit and **5** for the fifth digit. Finish writing down the code in the TV Code boxes (at end of this section).

TV Code:

--	--	--	--	--	--

CHANGING VOLUME LOCK

The XFINITY Digital Adapter remote is set to control the volume level of the Digital Adapter. Once a valid TV code is programmed the volume keys will operate the volume of the TV.

However, you may change the Volume Lock setting to regain volume control of the Digital Adapter as follows:

Changing Volume Lock from TV to the Digital Adapter :

1. Press and hold **SET** until the **Red Light** blinks twice, then release **SET**.

2. Enter in **9 - 9 - 3** (The **Red Light** will blink twice after the 3).

3. Press and release the digit **1** (The **Red Light** will blink 4 times after the 1).

Changing Volume Lock from Digital Adapter to the TV:

1. Press and hold **SET** until the **Red Light** blinks twice, then release **SET**.

2. Enter in **9 - 9 - 3** (The **Red Light** will blink twice after the 3).

Note: If a valid TV code is not programmed the **Red Light** will display one long blink.

3. Press and release the digit **2** (The **Red Light** will blink 2 times after the 2).

OVERVIEW

The XFINITY Digital Transport Adapter universal remote is designed to work with the XFINITY Digital Transport Adapter (Digital Adapter) supplied by Comcast. This remote is designed to operate all of the features and functions of the Digital Adapter and is programmable to operate the Volume and Power of your TV.

The remote control requires installing two (2) new AA batteries (included) and simple programming instructions to control your TV. For best results, please read and perform all instructions listed here. Also, keep this guide for future reference.

INSTALLING BATTERIES

- Pull back the remote control's battery cover and remove it.
- Insert the two (2) supplied AA batteries according to the + and - marks in the battery case.
- Push the battery cover back into place.
- Test the unit by pressing the power key.

If batteries are inserted correctly, the Red Light will blink.

NOTE: When batteries need replacement, the remote control will stop operating. Replace the old batteries within 15 minutes and the unit will be restored to its full functionality.

TROUBLESHOOTING

- PROBLEM:** During programming, the Red Light displays one long blink.
- SOLUTION:** An invalid entry has occurred. Check the key to be entered and try programming again.
- PROBLEM:** The Red Light blinks when you press a key, but Digital Adapter and TV do not respond.
- SOLUTION:** Make sure the remote control is aimed at your Digital Adapter and TV and is not farther than 15-feet away.
- PROBLEM:** When using the volume lock sequence or code verification, the Red Light displays one long blink.
- SOLUTION:** The long blink indicates that a valid TV code has not been programmed.
- PROBLEM:** The audio output on the TV is not in the right language.
- SOLUTION:** Press the Language (LANG) key to change the audio option back to the preferred language.

SETUP CODES FOR TV'S

3M	10737, 11616, 11655
A-Mark	10003
Abex	10032
Aiko	10092
Accurian	11803
Action	10873
Admiral	10093, 10463
Advent	10761, 10783, 10815, 10817, 10842, 11933
Adventura	10046
Aftron	10891
Aiko	10092
Aiwa	10701, 11914
Akai	10812, 11675, 10060, 10702, 10030, 10098, 10672, 11207, 11385, 11676, 11688, 11689, 11692, 11935
Alaron	10179, 10183, 10216
Albatron	10843
Ambassador	10177
America Action	10180
Ampro	10751
Anam	10180
Anam National	10055
AOC	10030
Aomni	11623
Apex Digital	10156, 10748, 10879, 10765, 10890, 11217, 11991
Archer	10003
Astar	11531, 11738
Audiovox	10451, 10180, 10092, 10003, 10802, 10846, 10875, 11284, 11951, 11952
Aurora Systems	10801
Aventura	10171
Belcor	10019
Bell & Howell	10154, 10016
BenQ	11032, 11315
Bradford	10180
Brillian	11007, 11257, 11258
Brockwood	10019

Broksonic	10236, 10463	GE	10047, 10051, 10451, 10178, 10021, 10027, 10029, 10055, 10135, 10279, 10282, 10747, 11907, 11919, 1192	Magnin	11907
Bush	10355	Gibralter	10017, 10030, 10019	Majestic	10015, 10016
Byd:sign	11309	Go Video	10886, 11823, 11831	Marantz	10054, 10030, 10704, 10854, 11398, 11554
Cadia	11283	GoldStar	10178, 10030, 10002, 10019, 1032	Matsushita	10250
Candle	10030, 10046, 10056, 10186	Goodmans	10360	Maxent	11755, 11714, 11757
Canon	10793, 11396	Gradiente	10392	MB Quart	11868
Carnivale	10030	Grundig	10683	Megatron	10178, 10145, 10003
Carver	10054, 10170	Grunpy	10180, 10179	Memorex	10154, 10463, 10150, 10178, 10016, 10179, 10877, 11570, 11911, 11920
Casio	10611, 11205	H & B	11366	MGA	10150, 10178, 10030, 10019, 10155, 11907
CCE	10217, 10329	Haier	11034, 10768, 11009	Micro	11436
Celebrity	10000	Hallmark	10178	Midland	10047, 10017, 10051, 10032, 10135, 10747
Celeria	10765	Hanns.G	11783	Mintek	11603, 11990
Changhong	10765	Hannspree	11348, 11745, 11783	Minutz	10021
Cinego	11986	Harley Davidson	10043, 10179, 11904	Mitsubishi	11250, 10093, 10150, 10178, 10014, 10019, 10098, 10155, 10331, 10358, 10592, 10836, 10868, 11278, 11392
Citizen	10060, 10030, 10092, 10046, 10056, 10186, 10280, 10561, 11669, 11671, 11672, 11928, 11935	Harman/Kardon	10054, 10078	Monivision	10843
Clarion	10180	Harvard	10180, 10068	Motorola	10093, 10055, 10835
Classic	11984	Havermey	10093	Moxell	10835
Coby	12017	Helios	10865	MTC	10060, 10030, 10019, 10049, 10056, 10091, 10216
Commercial Solutions	10047	Hello Kitty	10451	Multitech	10180, 10049, 10217
Compaq	10749	Hewlett Packard	11494, 11088, 11089, 11101	NAD	10156, 10178, 10037, 10056
Concerto	10056	Hisense	10748, 11660	Nakamichi	11493
Contec	10180	Hitachi	10145, 12243, 12143, 11904, 11345, 10797, 10737, 10724, 10723, 10413, 10279, 10227, 10173, 10151, 10097, 10095, 10056, 10038, 10032, 10016	Naxa	11998
Craig	10180	Hyundai	10849, 11219, 11294	NEC	10030, 10019, 10036, 10056, 10170, 10434, 10455, 10497, 10882, 11398, 11704, 11797, 12026
Crosley	10054	I-Inc	11746	NetTV	11755
Crown	10180	iLo	11286, 11603, 11665, 11684, 11990	Nikko	10178, 10030, 10092
Curtis Mathes	10047, 10054, 10154, 10451, 10093, 10060, 10702, 10030, 1045, 10166, 10016, 10056, 10466, 10747, 11919	Infinity	10054	Niko	11581
CXC	10180	InFocus	10736, 10738, 10741, 10781, 11516	Noblex	10430
CyberHome	10794	Initial	11990	Norcent	10748, 10824, 11089, 11365, 11590, 11591
Cytron	11326, 12003	Insignia	10171, 11204, 11326, 11517, 11641, 11780, 11892, 11963, 12002	Norwood Micro	11286, 11296, 11303
Daewoo	10451, 10092, 10019, 10066, 10067, 10091, 10661, 10672, 11909, 11928	Inteq	10017	Noshi	10018
Daytron	10019	IX	10877	NTC	10092
Dell	11264, 11080, 11178, 11403	Janeil	10046	NuVision	11657
Delta	11369	JBL	10054	Olevia	11144, 11240, 11331
Demon	10145, 10511	JCB	10000	Olympus	11342
Diamond Vision	11801, 11996	Jensen	10761, 10050, 10817, 11299, 11933	Onwa	10180
Digitstar	11565	JVC	10053, 10036, 10160, 10169, 10731, 11349	Optimus	10250, 10154, 10166, 11913
Digital Lifestyles	11765, 11822	Kamp	10216	Optoma	10887, 11348, 11674
Digital Projection Inc.	11482, 11725, 11726, 11750	Kawasho	10216, 10308	Optonica	10093, 10165
Dream Vision	11297	Kaypani	10052	Orion	10236, 10463, 11463, 10179, 11905, 11911
Dumont	10017	KDS	11687	Panasonic	10250, 10051, 10055, 10162, 10226, 10375, 11310, 11410, 11919
Durabrand	10463, 10180, 10178, 10171, 11034, 10003	KEC	10180	Penney	10047, 10156, 10051, 10060, 10178, 10030, 11919, 11907, 10747, 10309, 10149, 10135, 10110, 10032, 10027, 10021, 10019, 10018, 10003, 10002
Dwin	10093, 10720, 10747, 10774	KLH	10765, 10767	Philco	10054, 10030, 10019, 10020, 10028, 10096, 10302
Dynatech	10049	Kloss	10024, 10046, 10078	Philips	10054, 10037, 10690, 11483
Dynex	11463, 11780, 11785	Knoll Systems	10781	Pilot	10030, 10019
Eiki	10735	Konka	10632, 10638, 10707, 11385, 11831, 11939	Pioneer	10166, 10038, 10172, 11398
Electroband	10000	Kost	11262, 11483	Planar	11496
Electrograph	11755, 11623	Kreisen	10876, 11474	Polaroid	10765, 12063, 12002, 11991, 11962, 11769, 11767, 11766, 11762, 11687, 11565, 11538, 11385, 11341, 11328, 11327, 11326, 11316, 11314, 11286, 11276, 11262, 10865, 11385
Electrohome	10463, 10446, 11570, 11670, 11672, 11760, 11761	KTV	10180, 10030, 10183, 10217, 10280	Portland	10092, 10019
Element	11687	LG	11265, 10178, 10442, 10856, 11178, 11530, 11637, 11934	Prism	10051
Emerson	10154, 10451, 10236, 10463, 10180, 10178, 10171, 11963, 11928, 11913, 11911, 11909, 11905, 11665, 10282, 10280, 10270, 10183, 10181, 10179	Lloyd's	11904	Proscan	10047, 10466, 10747, 11922
Emprex	11422, 11546, 11765	Loewe	10136	Prima	10761, 10817, 11389, 11785, 11933
Envision	10030, 10813, 11365	Logik	10016		
Epson	11122, 11290	Luce	10837, 11031		
Erae	11222	Luxman	10056		
ESA	10812, 10171, 11963	LXI	10047, 10054, 10154, 10156, 10178, 10747		
Fisher	10154, 10159	Magnavox	11866, 10054, 10030, 10706, 11990, 11963, 11913, 11904, 11525, 11365, 11198, 10802, 10230, 10187, 10186, 10179, 10096, 10036, 10028, 10024		
Fujitsu	10179, 10186, 10683, 10853, 12008				
Funai	10180, 10171, 10179, 11904, 11963				
Futuretech	10180				
Gateway	11755, 11001, 11756				

TV CODES CONTINUED

Proton	10178, 10003, 10031, 10052, 10466
Protron	11320, 11323
Provieu	10835, 11687
Pvision	11222
Quasar	10250, 10051, 10055, 10165, 10219, 11919
RCA	10047, 12002, 11953, 11948, 11922, 11919, 11907, 11781, 10747, 10278, 10254, 10135, 10090, 10038, 10029, 10019, 10018
Realistic	10154, 10180, 10178, 10030, 10019, 10032, 10056, 10165
RevolutionHD	11623
Rhapsody	10183, 10216
Runco	10017, 10030, 10497, 10612, 11398, 11629
Sampo	11755, 10030, 10032, 10052, 10100, 10110, 11597
Samsung	10812, 10060, 10702, 10178, 10030, 11959, 11632, 11575, 11060, 10814, 10766, 10587, 10482, 10427, 10408, 10329, 10217, 10056, 10032, 10019
Sansui	10463, 11409, 11904, 11911, 11935
Sanyo	10154, 10088, 10146, 10159, 10232, 10484, 10735, 10798, 10799, 11907
Sceptre	10878, 11217, 11360, 11599
Scimitsu	10019
Scotch	10178
Scott	10236, 10180, 10178, 10019, 10179, 10309, 11711
Sears	10047, 10054, 10154, 10156, 10178, 10171, 10015, 10056, 10146, 10149, 10159, 10168, 10179, 10747, 11007, 11904
Seleco	10737, 11297
Sharp	10093, 10153, 10165, 10398, 10491, 10851
Sharper Image	11950
Sheng Chia	10093
Sherwood	11399
Shogun	10019
Signature	10016
Signet	10800, 10844, 11262
SIM2 Multimedia	11297
Simpson	10186, 10187
Skyworth	11799
Solarism	11220
Sole	10813, 11031, 11366, 11377, 11483, 11530, 11623, 12075, 12076
Sony	10000, 10011, 10273, 10353, 10834, 11317, 11400, 11685, 11786, 11791, 11904, 11925
Soundesign	10180, 10178, 10179, 10186
Sova	11320, 11952
Soyo	11546, 11746, 11824, 11826, 11828, 11830, 11831
Spectron	10003, 10137
Spectroniq	11687
Squareview	10171
SSS	10180, 10019
Starlite	10180
Studio Experience	10843
SunBrite	11420, 11435
Superscan	10093, 10864
Supre-Macy	10046
Supreme	10000
SVA	10748, 10587, 10768, 10865, 10871, 10872
Sylvania	11864, 10054, 10030, 10171, 10020, 10028, 10065, 10096, 11314, 11665, 11963
Symphonic	10180, 10171, 11904, 11913
Syntax	11610, 11144, 11240
Tandy	10093, 10218

LCD TV'S

Accurian	11803
Action	10873
Akai	11675, 11676, 11688, 11689, 11692, 11935
AOC	11365
Aomni	11623
Apex Digital	10890, 11217
Astar	11531, 11738
Audiovox	10180, 10802, 10846, 10875, 11284, 11951, 11952
BenQ	11315
Byd:sign	11309
Cadia	11283
Casio	11205
Citizen	11669, 11671, 11672, 11935
Coby	12017
CyberHome	10794
Dell	11264, 11080, 11178
Digital Lifestyles	11765, 11822
Dyne	11780

Element	11687
Emerson	11963
Emprex	11422, 11546, 11765
Envision	10813, 11365
Funai	10171
Go Video	10886, 11823, 11831
H & B	11366
Hanns.G	11783
Hannspree	11348, 11745, 11783
Hewlett Packard	11088
Hisense	11660
HP	11088
Hyundai	10849, 11219, 11294
I-Inc	11746
iLo	11286, 11603, 11684, 11990
Initial	11603, 11990
Insignia	11204, 11517, 11780, 12002
IX	10877
Jensen	11299
Konka	11831
Kost	11262
Kreisen	10876, 11474
LG	10856, 11178
Magnavox	11866, 10802, 11198, 11365, 11990
Maxent	11755, 11714, 11757
MB Quart	11868
Micro	11436
Mintek	11603, 11990
Mitsubishi	11250
NEC	11797, 12026
Niko	11581
Norcent	11365, 11591
Norwood Micro	11286, 11296
NuVision	11657
Olevia	11610, 11144, 11240
Philips	11483
Planar	11496
Polaroid	11262, 11276, 11316, 11341, 11538, 11687, 11762, 11766, 11767, 11769, 12063
Prima	11785
Protron	11320, 11323
Puneet	11546
RCA	10047, 11781
RevolutionHD	11623
Runco	11629
Sampo	11755, 11597
Samsung	10812, 10766, 10814, 11575, 11632
Sansui	11409
Sceptre	10878, 11217, 11360, 11599
Scott	11711
Sharp	10093
Sherwood	11399
Signature	11262
Skyworth	11799
Solarism	11220
Sole	11031, 11366, 11377, 11483, 11530, 11623, 12075, 12076
Sony	11685, 11786, 11791
Sova	11320
Soyo	11546, 11746, 11824, 11826, 11828, 11830, 11831
SunBrte	11420, 11435
Superscan	10890, 10019, 10797, 11407
SVA	10017, 10463, 11265, 10178, 10092, 10016, 11904, 11909, 10003
Tatung	11286
Techview	10847, 12004
Toshiba	11343
TruTech	11723
Ultra	11323
US Logic	11286
Venturer	11865
Vidikron	11398, 11629
Viewsonic	10857, 10864, 10885, 11330, 11578, 11627, 11742, 12014
Viore	11684, 11811
Visart	11336
Vizio	11758, 10864, 10885, 11756
Westinghouse	10885, 10889, 10890, 11282, 11577
WinBook	11381, 11503
Wyse	11365
Zenith	11265

PLASMA TV'S

Akai	10812, 11675, 11207, 11688
Albatron	10843
AOC	11590
Aomni	11623
BenQ	11032
Daewoo	10661
Dell	11264
Delta	11369
Electrograph	11755, 11623
Erae	11222
ESA	10812
Fujitsu	10186, 10683, 10853, 12008
Gateway	11755, 11001, 11756
H & B	11366
Helios	10865
Hewlett Packard	11089
Hitachi	10797, 12143, 12243
HP	11089
iLo	11684
JVC	10731
LG	10178, 10856
Magnavox	11866
Marantz	10704, 11398
Maxent	11755, 11757
Mitsubishi	10836
Monivision	10843
Motorola	10835
Moxell	10835
Nakamichi	11493
NEC	11398, 11704
NetTV	11755
Norcent	10824, 11089, 11590
Norwood Micro	11303
Panasonic	10250
Philips	10690
Pioneer	11398
Polaroid	10865, 11276, 11327, 11328
Prima	11785
Provieu	10835
Puneet	11546
Pvision	11222
RevolutionHD	11623
Runco	11398
Sampo	11755, 11597
Samsung	10812, 11632
Sole	11623
Sony	10000, 11317
Studio Experience	10843
SVA	10865
Tatung	11101, 11287, 11288, 11756
Toshiba	11704
US Logic	11303
Viewsonic	11755, 10797
Viore	11207, 11684
Vizio	11758, 11756
Yamaha	10797
Zenith	10178